



Model OT-PLC101POE / OT-PLC101-DC

PoE Extender

Product User Manual




www.ourten.com

OT-PLC101POE/OT-PLC101-DC PoE Extender is a high speed Ethernet transmission device. It transmits Ethernet and PoE signal over 2-wire cable such as Cat5, coaxial cable, telephone line and power line. This device supports both PoC and PoE function.

This device contains one Receiver unit and one Transmitter unit, and supports point to point and point to multi-point network transmission. It can greatly simplify the project cabling, apply to expand network system and transmit Ethernet and PoE signal for long distance.

Dimension

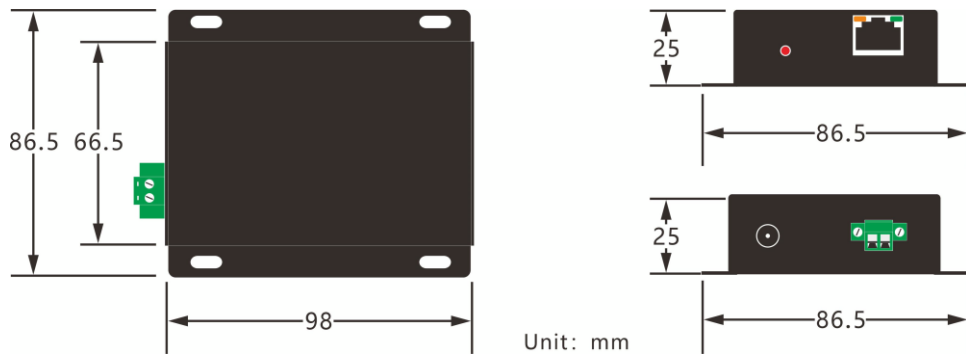

Receiver Unit



Transmitter Unit

Note: Dimension error value ± 1 mm

Features

- ☆ Max PoE distance can reach 500m
- ☆ Full duplex 10/100Mbps
- ☆ Support power over cable technology (48~56VDC/PoE)
- ☆ Plug and play, transparent transmission, no adjustment and no need to change the upper software
- ☆ Low dissipation, communication dynamic adjustment and high performance error correction coding technology


Technical Parameter

Category		Description
Power Input (Receiver)	RJ45/PoE Input	Standard 48~56VDC; IEEE802.3af/at/bt
	DC Port Input	48~56VDC
	Power Consumption	≤1.5W / PC
Power Output (Transmitter)	RJ45/PoE Output	Standard 48VDC; IEEE802.3af/at
	Power Consumption	≤1.5W / PC
Ethernet	IEEE 802.3, IEEE802. 3u	Full duplex 10/100Mbps
Physical Characteristic	Dimension (L x W x H)	Receiver: 98x86.5x25mm Transmitter: 123x26x26mm
	Material	Aluminum Alloy
	Net Weight	240g/105g
Operating Environment	Working Temperature	-20°C~60°C
	Working Humidity	<95% (Non-condensation)

PoE Power & Distance Chart

Network & Power can be transmitted over 2-wire cable. The PoE power output will be attenuated when transmitted through cable. Distance is longer, attenuation is more.

Power loss and attenuation differ from the cable types. The following PoE power distance chart is just for your reference.

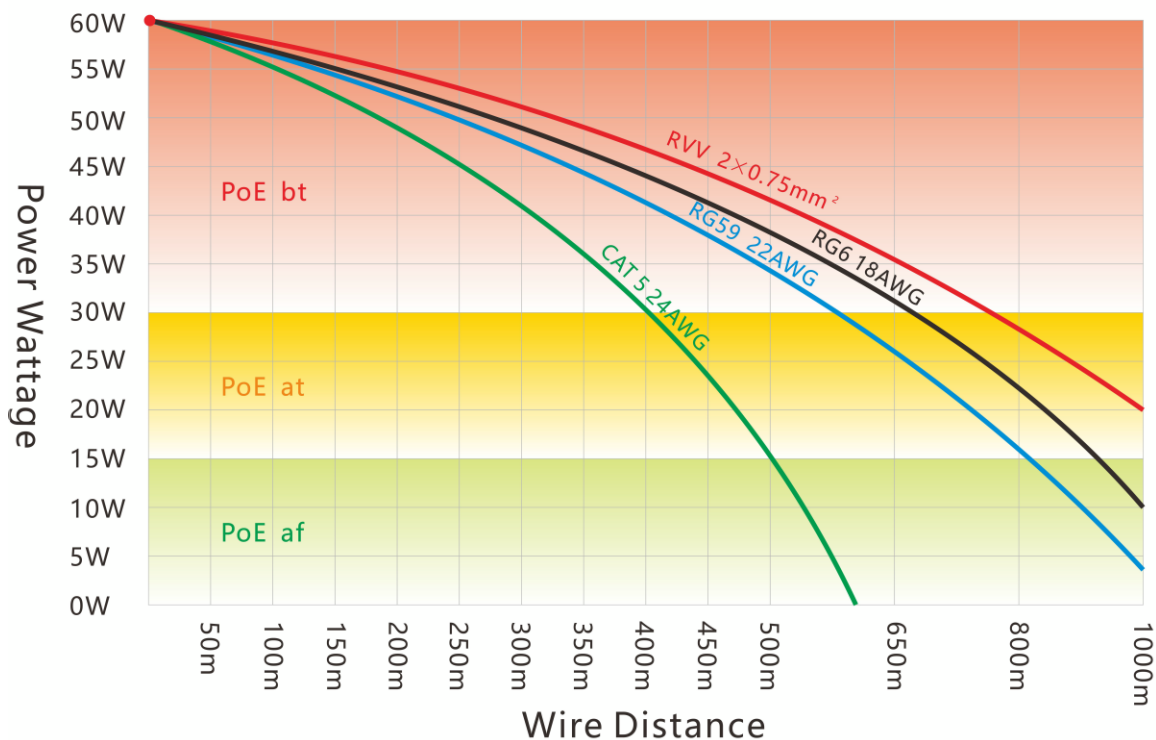

Installation Instructions

Definition of Receiver & Transmitter; Terminal device & Remote device:

Receiver & Transmitter: Ethernet Extender Unit connected to the computer is Receiver by default. Ethernet Extender Unit connected to the camera is Transmitter by default.

Terminal device / Remote device: Terminal device generally refers to the direction of computer / machine room, and remote device generally refers to the direction of camera.

Receiver		Transmitter	
Step	Installation Instruction	Step	Installation Instruction
1	Connect PoE power supply equipment to RJ45 terminal of receiver unit (1)	7	Connect network equipment to RJ45 port of transmitter unit (7)
2	Positive and negative connection terminal of 2-wire cable (2)	8	This port is idle and it is strictly prohibited to connect to the power supply (8)
3	Spare terminal for external power adaptor (3)	9	Power indicator is always on (9)
4	Power indicator is always on (4)	10	Positive and negative connection terminal of 2-wire cable (10)
5	Line indicator is flashing after successful connection (5)	11	Network data indicator quickly blinks when data is normal (11)
6	Network data indicator quickly blinks when data is normal (6)	12	Line indicator is flashing after successful connection (12)

Installation Diagram



Power Supply Tips

1. When the Receiver unit is powered by 48~56VDC, the Transmitter unit and PoE devices can be powered without external power supply. Non-PoE devices need the external power supply.



2. When the Receiver unit is powered by PoE switch, the Transmitter unit and PoE devices can be powered without external power supply. Non-PoE devices need the external power supply.



Note:

A. Please pay more attention to the Positive and Negative pole when you connect the 2-wire transmission cable.

B. When used with Receiver unit OT-PLC101-DC, the power port of Transmitter unit OT-PLC101POE is idle and cannot be connected to any power supply; otherwise it will damage the products!

Troubleshooting Method

1. When direct connection by network cable is normal, the lag time is large after connecting Ethernet Extender.

(1) Check 2-wire connection is correct or wrong. In the case of the wrong connection, the signal can be transmitted but the lag is very large.

(2) When multiple Ethernet Extenders are used together, they need to be grouped and paired to avoid the delay caused by signal crosstalk.

2. After a period of using Ethernet Extender, the Ethernet signal has packet loss or disconnection.

(1) Check the power adaptor status, if find they are aged or damaged, please replace it.

(2) Check all the cable connections, if find any loose cable or short circuit, please solve it.

3. The screen is frozen, and the Ping packet is normal.

(1) Ethernet Extender is transparent transmission. Check whether the version and setting of IP Camera are correct or not.

(2) Check whether the throughput of network switch is enough or not. Please directly connect the computer to check the status.

(3) Confirm if all the IP surveillance devices belong to the same brand or not, whether they support onvif, and then check their compatibility, do the test of reducing video stream.

(4) If working environment temperature of Ethernet Extender is too high, firstly cut off the power supply. If confirm the devices are overheated, please adopt temperature decrease measures.

4. When multiple receiver units are placed together for use, they can't communicate or have significant network latency.

(1) Install the receivers with a distance of at least 2 meters or place them separately in metal equipment boxes to avoid signal crosstalk.

(2) Do the grouping for Ethernet Extenders by software. The grouping software is provided by us, please contact us timely.

Use Tips

When you use OT-PLC101POE / OT-PLC101-DC, please follow the below tips as a reference, in order to reduce the fault in the process of using and the inspection work.

Cables:

1. Signal transmission cable must be the copper cable. Other material cables will cause the decrease of signal transmission quality and distance.
2. This device suggests using 2-wire or coaxial cable to transmit data, if need to transmit PoE, please use higher specifications cable, suggest using RVS 2x0.75mm² or above.
3. The arbitrary mixed connection of a variety of cable may reduce the quality of signal.
4. Keep the distance of the network cable between the remote devices as short as possible to ensure stable network transmission.

Power:

1. The device supports PoE & DC power input and the remote device PoE power output. Make sure that the electrode of transmission cable is consistent; otherwise, it is easy to cause the power failure.
2. Please cut off power supply before using the device. Supply power after checking all connection is right. It is strictly prohibited to plug or unplug the devices when they are working.
3. The Transmitter unit doesn't need external power supply, the Receiver unit needs power supply, the total power consumption of Receiver and Transmitter unit is 7W.
4. If using external power adapter to supply power, suggest using power adapter 48~56VDC/1A for Receiver unit.

5. The power consumption of power adapter should exceed more than 30% of all equipments, to ensure the normal power supply output under the cable loss.
6. If you use PoE switch or PoE module power supply, please choose the power output exceeds more than 30% of all front-end equipment power consumption.
7. The power output of Transmitter unit should be adjusted according to PoE equipments power output capacity.

Connection:

1. Receiver and Transmitter unit can't be installed oppositely. Receiver unit should be installed at control room side for easy power supply.
2. When using management PoE switch and the line connection is correct, but the devices don't work, please firstly unplug the PoE switch and the 2-wire cable at Receiver unit side, then re-plug PoE switch to the Receiver unit and supply power, when Receiver unit is working normally, then connect 2-wire cable.
3. Long distance cable connections must be standard connection method, such as welding or using connectors.
4. If device fails, do not disassemble or repair it by yourself. Please contact us timely.



Shaoxing Ourten Electronics Co., Ltd.

#1 Liando U Valley, No. 1999 Wuxing West Road, Shangyu, Zhejiang, China

Tel: +86-21-5888 9980 (+86-575-8213 7256); Fax: +86-575-8212 7256

Email: sales@ourten.com

www.ourten.com

Thank you for choosing Ourten!